


SAFETY TOOLS

SAFETY GLOVE SIZE CHART

Not sure what size you need? Use this chart to ensure a proper fit.

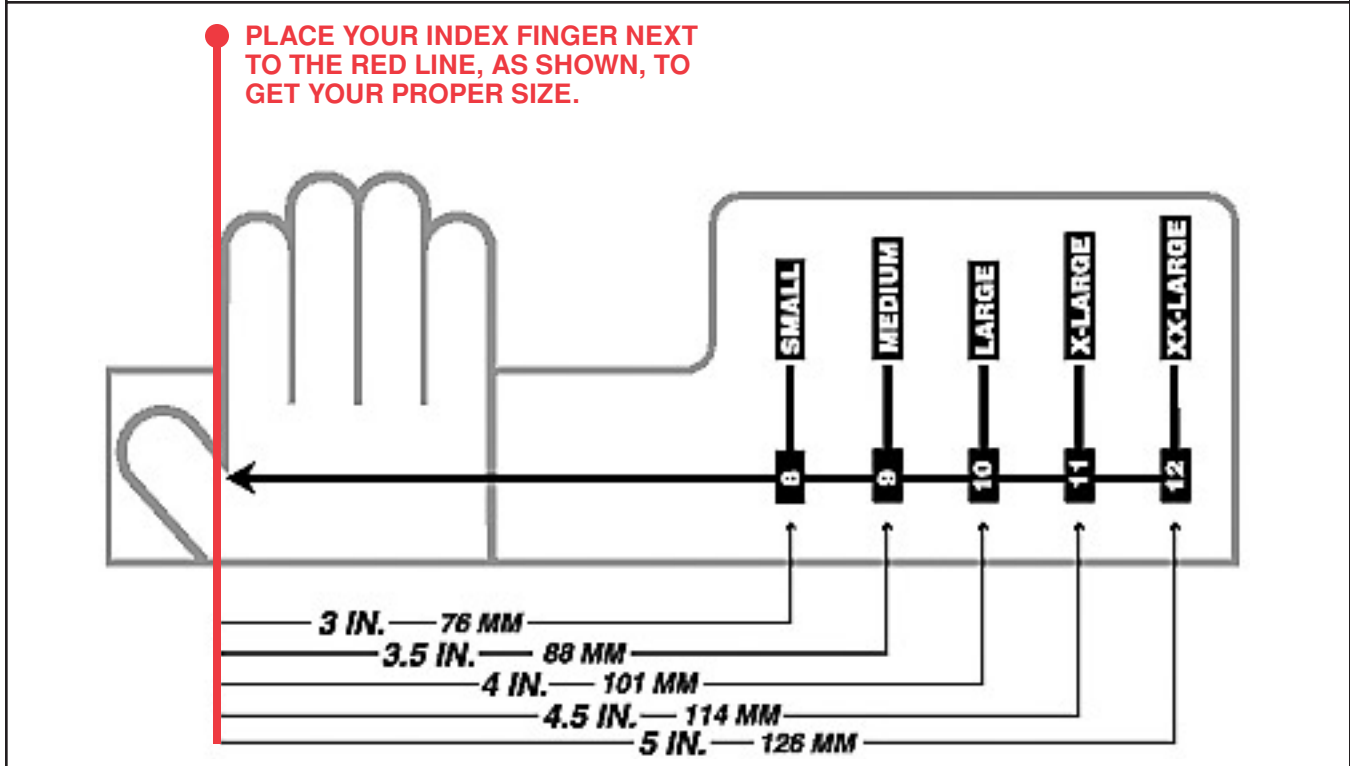

TECHNICAL REFERENCE


HOISTING

CAPSTAN HOIST INSTALLATION - MOUNTING TO TRAILER HITCH WITH SWIVEL BASE

Parts required:

1. **#T308-0999** - Mount, Hitch-Receiver, Capstan
2. **#C308-0903** - Base, Swivel Mount, Capstan
3. **#C308-0890** - Bracket, C-, Capstan Hoist

Align the "C" Bracket to the Swivel Base with the flat side (1000# marking) toward the pivot bolt and fasten into place with the hardware included. Fasten the Swivel Base to the Receiver Hitch with your 1/2", grade 5 hardware, not included. Install the Capstan Hoist with the Drum over the pivot bolt of the Swivel Base. Align the Capstan Drum perpendicular to your load and you are ready to begin hoisting.

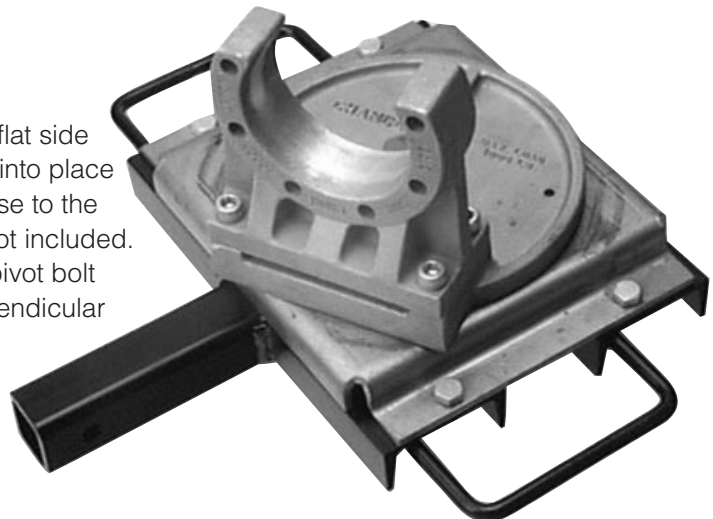


HOISTING

WIRE ROPE CLIP INSTALLATION METHOD


Always consult the manufacturer's recommendations for the correct size, quantity and spacing of the clips.

U-BOLT TYPE

There is only one correct method of attaching the U-bolts to the wire rope ends. The base or saddle rests on the "live" side and the U-bolt on the "dead" end. See the illustration below, for the right way:

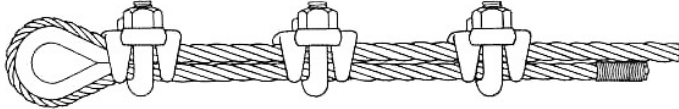

Two of the wrong ways to install clips are illustrated below:

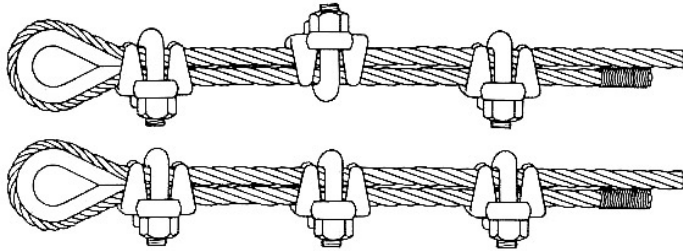

Five of the six saddles are on the "dead" side. This is NOT correct.

TWIN SADDLE TYPE

Because this clip has two identical halves, there is no incorrect method of installing them, provided the quantities and spacing follow the manufacturer's instructions. See the illustration below:

